



OPERATING INSTRUCTIONS (For using batteries)

1. Install 6 "AA" batteries (not included) as shown in (Diagram 1) and replace the battery door.
2. Remove cap and foil seal from Bubble Solution Container. (Diagram 2)
3. Line up the machine unit on top of the solution container. Be sure the plastic tube is inside the Container. (Diagram 3)
4. Attach the strap on both sides. (Diagram 4)
5. Press the button to start the Adjustabubble Machine. (Diagram 5) Bubble solution will be pumped over wand and fill the tray full after around 30 seconds.
6. Switch ON/OFF button to select 3 options: Small Bubbles, Big Bubbles and Bubbles inside Bubbles. (Diagram 6)

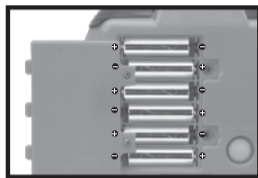


Diagram 1



Diagram 2

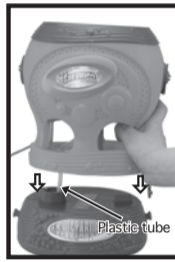


Diagram 3

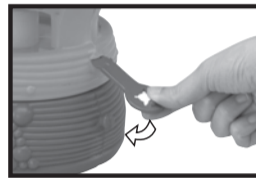


Diagram 4



Diagram 5



Diagram 6

CLEANING

1. In order to keep your machine working properly, be sure to clean it out with warm water after every use. Failing to do so may lead to solution build up and render the machine inoperative!
2. Lift the Adjustabubble Machine from the solution container and replace container cap. (Diagram 7)
3. Using a small container filled with warm water, insert the plastic tube into the water and press the switch to pump water through the mechanism inside the machine (Diagram 8).
4. Allow the pump to run until you see water flowing through the wands above. Continue to run for approximately 60 seconds. (Diagram 9)



Diagram 7



Diagram 8

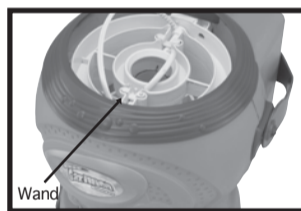


Diagram 9

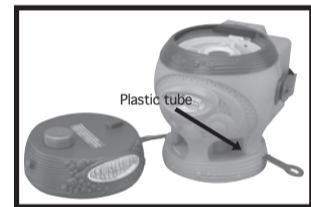


Diagram 10

STORAGE

1. Store the plastic tube inside the empty space in the middle of the Adjustabubble Machine. (Diagram 10).

PRECAUTIONS

1. **DO NOT** immerse the machine into water.
2. **DO NOT** carry the machine around when it is powered on!
3. **DO NOT** lift unit by the wand! (Diagram 11)



Diagram 11

TROUBLE SHOOTING

Problem	Action
1. The bubble wands are not moving	<p>Using Batteries:</p> <ul style="list-style-type: none"> - Check to make sure the batteries are correctly installed. - Check to make sure the batteries are not exhausted, batteries may need to be replaced by new ones. - Clean the machine as instructed in the CLEANING section. <p>Using AC adaptor:</p> <ul style="list-style-type: none"> - Make sure the plug of your AC adaptor has been firmly inserted into the Adjustabubble Machine socket. - Check whether your AC adaptor has been plugged correctly into your AC power supply. (Diagram 12)
2. The machine is running but there are no bubbles	<ul style="list-style-type: none"> - Clean the machine as instructed in the CLEANING section. - If bubbles still do not appear cleaning, you may need to replace batteries with new ones. (Diagram 13)

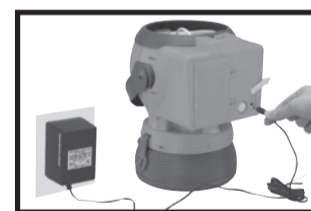


Diagram 12



Diagram 13

Important Note:

1. For best results, only use Gazillion® FanYang Blue Bubble Solution, funnel included for use when refilling.
2. Bubble solution may spill and residue from bubbles may create a slippery surface, all care should be taken to avoid such situations.
3. The Adjustabubble Machine produces massive amounts of bubbles. Care should be taken to place the unit away from anything you don't want to get wet.
4. Adjustabubble Machine can operate with an AC adaptor, not included.
5. Strong wind will weaken the performance of bubbles in bubbles.
6. Only carry the machine around with the handle. Never carry it with wands.
7. Please retain this instruction sheet for future reference.